



## Installation Instructions

# Model 111 Full Repair Clamps

Read instructions before starting installation\*

Review of “Tricks of the Trade” on the reverse will assist with installation.

For purposes other than water, contact JCM Industries for application and product assistance.

1. Clean and scrape pipe. Remove any scale, pipe wrap, debris or dirt that may interfere with the complete sealing of the gasket. Inspect pipe for integrity, size, outside diameter and surface irregularities. Confirm the proper size and range of repair clamp. Inspect fitting to ensure all parts are included.

For fittings furnished with stainless steel hardware, see reverse for fastener management.

2. Lubricate the pipe and the fitting gasket with soapy water. **Do not use oil base pipe lubricant.** Loosen nuts of bolts and back nuts to the end of the bolt (complete removal of bolts is not necessary). Release square necked bolts from lug ears and open the clamp.
3. Wrap gasket around pipe and center over damaged area. Install stainless steel clamp shell over the gasket, ensure gasket stainless steel armor plate is centered at the open gap between shell lugs. Placement stainless “tips” aid in feeling positioning in adverse conditions. Engage bolt(s) in slotted receiver lugs and finger tighten to hold in place. Begin bolt tightening.
4. Tighten bolt(s) evenly to the following torque values, ensure torque values with calibrated field torque wrench:


|  |                       |
|--|-----------------------|
| <b>Nominal sizes 1/2” - 1-1/4” with 3/8” Bolts</b> | <b>25 Foot Pounds</b> |
| <b>Nominal sizes 1-1/2” - 2” with 7/16” Bolts</b>  | <b>35 Foot Pounds</b> |

5. Complete installation of fitting, return after approximately 15 minutes and confirm minimum bolt torque levels have been maintained.

### For Use on Natural Gas Distribution Applications

|         |       |                |             |
|---------|-------|----------------|-------------|
| Rating: | CIP   | 2” thru 8”     | 100 PSI Gas |
|         | CIP   | 10” and 12”    | 60 PSI Gas  |
|         | Steel | 1-1/4” thru 8” | 100 PSI Gas |
|         | Steel | 10” and 12”    | 60 PSI Gas  |

**▲ WARNING**

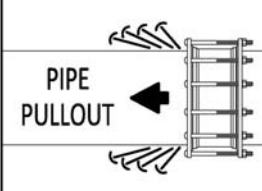

WHEN PIPE PULLOUT  
COULD OCCUR, PIPE JOINT  
**MUST**  
BE ANCHORED.  
FAILURE TO ANCHOR PIPE  
JOINT COULD RESULT IN  
ESCAPING CONTENT  
CAUSING  
PROPERTY DAMAGE,  
SERIOUS INJURY OR DEATH.



INT111-0115

\*Ensure fitting is suitable for application (confirm size, materials, pressure ratings, line content, meets local governing & association standards, etc.). Pipeline operation forces, including pressure fluctuations, thermal expansion/contraction, movement/shifting, etc. will influence the success of the application. Proper anchorage, restraint, harnessing, thrust blocks or other devices must be provided to prevent pipe movement (lateral, angular, axial) or pipe pullout from the bolt-on fitting. Inspection of the pipe integrity is the responsibility of the end user. JCM recommends the use of calibrated torque wrench. Failure to follow installation instructions will result in voided product warranty.

For application review or questions contact JCM Industries at 1-800-527-8482, 903-832-2581



## Tricks of the Trade for Installation

# Model 111 Full Repair Clamps

Years of field experience, special applications and product testing have revealed many subtleties regarding application and installation of repair clamps. For maximum performance under adverse conditions take advantage of the JCM “Tricks of the Trade.”

- Always clean and lubricate pipe with water or soapy water. This helps overcome friction when adjusting the clamp. Do not use oil base pipe lubricant; the oil does not disperse, leaves residue and prevents the gasket from sealing/adhering to the pipe wall. Use water solvent lubricant. Use of a mirror will assist inspection of backside of pipe or pipe in cramped, limited space.
- Place a reference mark on the pipe back from the damaged area to help in centering clamp over break. Clamps provide maximum performance when centered over damage area.
- For installation on pipe under pressure: lubricate the clamp gasket with soap/water mixture, assemble clamp on the pipe beside the damaged area, lightly engage bolts and slid the clamp over the damaged area, proceed with installation steps.
- Damage involving large holes or massive pitted areas - use stainless steel plate over large holes (under repair clamp) to provide the gasket a surface to seal against.
- Lubricating clamp bolts will ease clamp installation and assure proper torquing of bolts.



### JCM Quality Fitting Equipped With 18-8 Stainless Steel Bolts and Nuts

When not properly handled it is the nature of stainless steel fasteners to gall and freeze (seize up). This is due to the inherent properties of the stainless material. Galling and freezing is often triggered by the presence of metal chips, burrs and grains of sand on the threads of the bolts and nuts. Extra care has been taken by JCM prior to assembly and packing of this fitting to assure a trouble-free installation.

1. The nuts and bolts are made from material of different hardness so that they have different strengths.
2. Nuts are coated with a special antiseize coating. Additional lubricant may be needed. **A Molybdenum-Base lubricant is recommended.**
3. Each nut is assembled by hand to be sure that it went on the bolt freely.
4. The bolts and nuts are handled carefully to avoid damage to the threads.
5. The bolts and nuts are made to exacting specifications to assure that the correct material is used and that the thread form is correct.

Stainless hardware is especially susceptible to galling. JCM supplies specially coated nuts to eliminate the galling caused by overtightening, but **the bolt threads must be kept clean, free from nicks and not pitched or thrown into the tool bucket during the installation process.** Use of the **JCM 901 Master Wrench or JCM 905 Torque Wrench with Deep Socket** is highly recommended. Use of pneumatic wrench for installation could cause hardware to seize and is not recommended.